

# Programming Your Remote

**First, press STB then hold Setup and (B) until STB flashes twice.**

Next we will search for the remote control code automatically. There are two options to try.

## Option 1:

1. Turn on your **TV** with the TV's power button. This may be on the front panel, right or left side, bottom, or some may even be on the right or left side but on the back side of the TV.
2. On the remote control, press **TV** button once. Then press and hold **SETUP** until the TV key blinks twice.
3. **Type 9 9 1.** The TV button will blink twice.
4. **Type 1.** The TV button will blink once.
5. Press **POWER** once, and the TV button will blink once.
6. Press and release the **CHANNEL UP** key continuously; then stop when the TV turns off. **NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first. You may have to press the CHANNEL UP key 100 or more times to find the correct code.**
7. Then press and hold **SETUP** to lock in the code. The TV button will blink twice to indicate that the code is saved.
8. Point the remote at the TV and press the **POWER** button to test. **NOTE: If the TV does not turn on, repeat steps 1 through 7.**

## Option 2:

1. You will need the remote that originally came with your TV. Turn on your TV with the TV's power button or original remote. These buttons may be on the front panel, right or left side, bottom, or some may even be on the right or left side but on the back side of the TV.
2. On the CCT remote control, press the **TV** button once. Then press and hold **SETUP** until the TV button blinks twice.
3. **Type 975.** The TV button will blink twice.
4. Take both the original remote and the CCT remote and face them toward each other; about an inch apart.
5. Press the **VOLUME UP** button on the CCT remote (the TV button will flash fast) and then press the **VOLUME UP** button the original TV remote (the TV button will flash twice to save the code for that button). Repeat step five with the **VOLUME DOWN, MUTE, and POWER** buttons.
6. Press and hold **SETUP** until the TV button flashes twice.